

## **Programming steps to the RISCO ProSYS 128 Control panel working in conjunction to RDC transmitters.**


### Connecting the dialler on the panel and radio

Locate the dialler on the alarm PC board. Connect the LINE 1 from the panel to the Negative on the RDC radio and connect the LINE 2 from the panel to the TIP on the RDC radio. Power the radio directly from battery and not the panel using the BTE7 battery connector.

### Program the following options into the ProSYS Panel

- Press \* 7 and installer code 0128 (Default) and #
- Use the arrow to go down to 5) DAILER press #
- Select 1) Link-up press #
- Select 1) MS Link-up press #
- Select 1) MS #1 Link-up press #
- Select 1) PSTN/VOICE press #
- Type in the PHONE Nr 1234 and press # press \*\*
- Use the Arrow to go down to 2) ACCOUNTS and press #
- Select 1) Partition 1 and press #
- Select 1) For MS Tel 1 and press #
- Type in the ACCOUNT code 001234 and press #
- Select N for (NO) to not apply settings to all partitions and press # Press \*\*
- Use the arrow to go down to 3) COMM FORMAT press #
- Select 1) For 1<sup>st</sup> tel. Press #
- Type in the format 0420 press # press \*
- Select 5) CONTROLL press #
- Select 1) MS Enable to Y (YES) and press #
- Use the arrow to go down to 6) PARAMETERS and press #
- Select 6) Dial Method press #
- Select 1) DTMF press # press \*\*
- Exit and save programming

DEOL Wiring

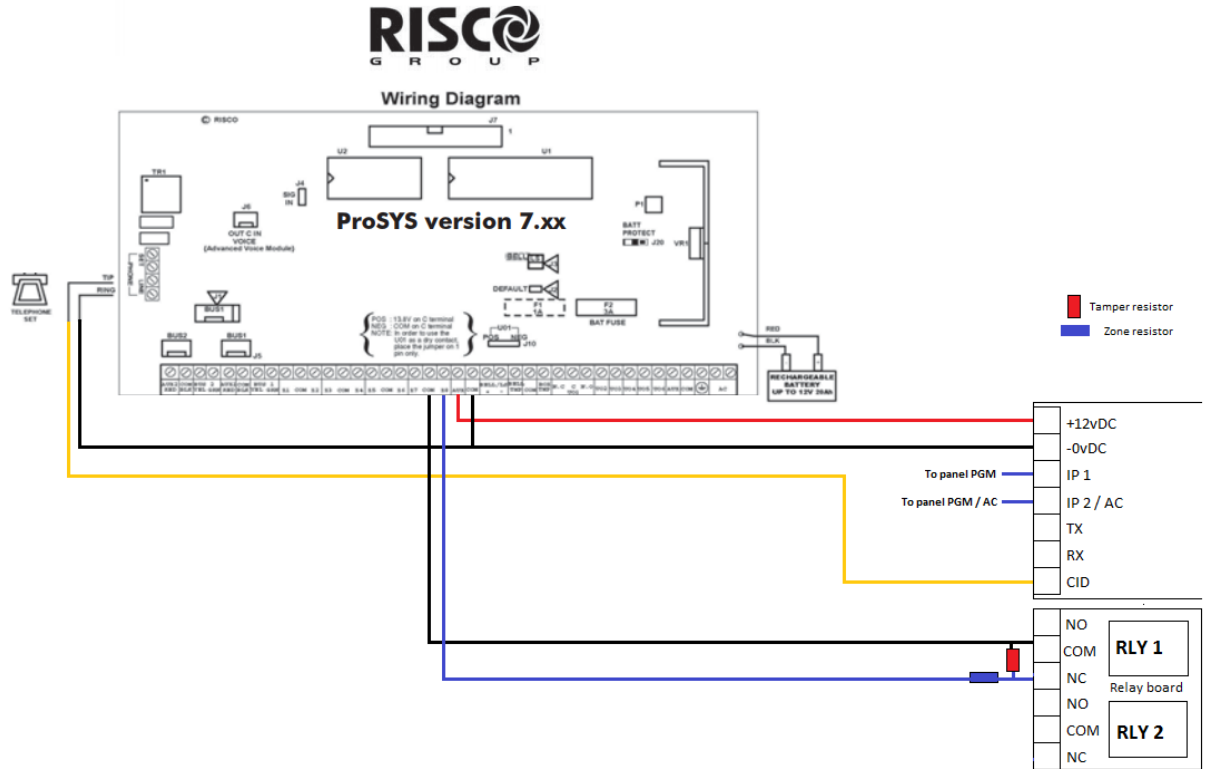

SEOL Wiring

