 


# Broadband Black MAX™

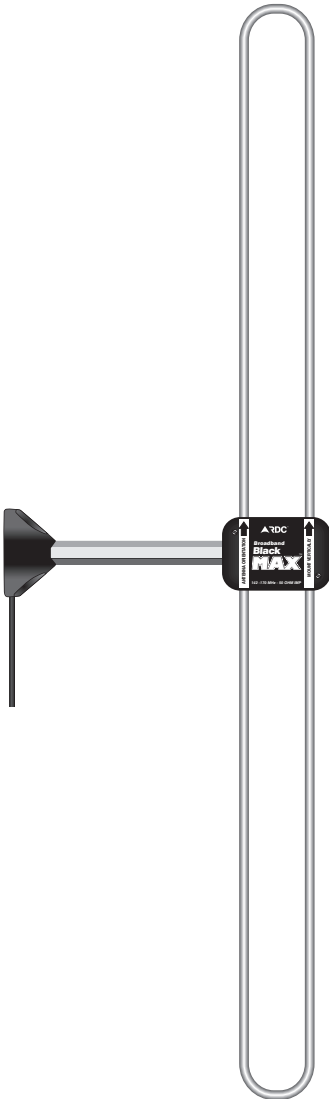

## Mounting - for Optimum Performance

 
1. The antenna must always be mounted vertically. The orientation of the printed sticker will read correctly when the antenna is mounted vertically.
2. Whenever possible, try and fit the dipole with its point facing in the direction of the nearest repeater site or base station.
3. The antenna must not be mounted less than 2 metres from any large metal object.
4. The transmitter generates a very strong RF field around the antenna. This RF field can affect other electronic equipment, such as computers, television sets, music systems, and alarm equipment, especially passives. Always mount your antenna far from other electronic equipment.
5. When mounting an antenna against a wall, always check for metal objects or other electronic equipment, on the other side of the wall.
6. **NB:** When connecting a Black Max to the internal RF connector of a transmitter, ensure that none of the braided screen wires are shorting to the centre connection terminal.

24hr Standby  
082 444 7176




# Connecting to the Transmitter

Strip off 12mm of the outer insulation taking care not to damage the braiding.

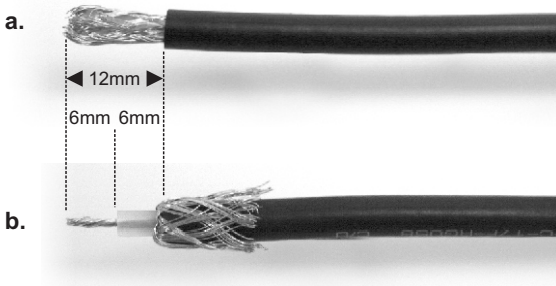

 Frays and pull back the braiding and strip off 6mm of the inner white insulation leaving 6mm of the inner wire exposed.

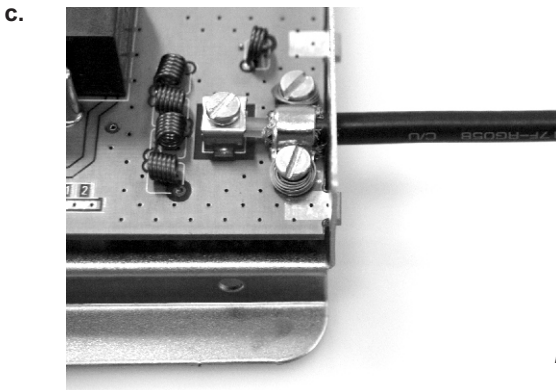

Copyright © 2010  
Radio Data Communications (PTY) Ltd.

Insert the stripped cable through the hole in the transmitter chassis and through the saddle. The stripped end of the cable must fit into the small square antenna socket. Secure the antenna by tightening the screw on the antenna socket and the 2 screws on the saddle.

**NOTE: Ensure that none of the strands of braiding wire short to the inner core of the antenna cable!**

### Disclaimer

"RDC & Safewave Antennas cc record that they merely supply the products to the customer and that the customer has the sole responsibility to install the products and/or to incorporate the products in security systems. RDC & Safewave Antennas cc do not take any responsibility for the installation of the products or for ensuring that any installation complies with SAIDSA Specification for Intruder Alarm Systems for Domestic, Commercial, Retail and Industrial Installations.

The customer shall also have no claims against RDC or Safewave Antennas cc, its directors, employees and agents of whatsoever nature, in any amount whatsoever, arising from any failure in or malfunction of a security system containing the products, or from the use of the products, and whether arising from the negligent act or omission, gross or otherwise of RDC or Safewave Antennas cc, its directors, employees or agents.

The customer indemnifies and holds harmless RDC and its directors, employees and agents of whatsoever nature in respect of any and all loss, damage, costs, expenses or claims which have been incurred by or brought against them by any third party (whether for the death or injury of any person or loss of or damage to any property, including any pure economic loss) arising from any failure of or malfunction of a security system containing the products installed by or on behalf of the customer, or from the use of the products in any such system whether or not arising from the negligent act or omission, gross or otherwise of RDC or Safewave Antennas cc, its directors, employees and agents."