


# G-TX - Remote SMS Command Guide

24hr Standby  
082 444 7176

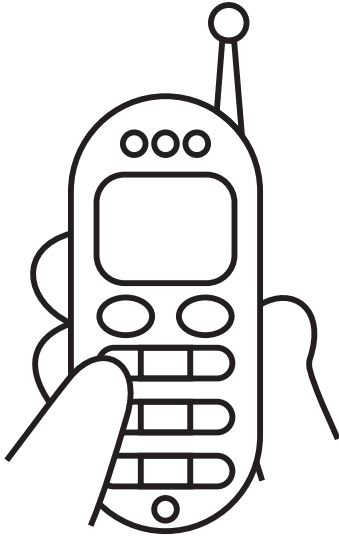

## Remote Configuration

The relays on the G-TX can be controlled via SMS.

### IMPORTANT

Because of the dual SIM feature, the user sending a command to the G-TX may have to try both cell numbers associated with the unit if two SIM cards are used. This is because the G-TX is designed to switch SIM cards for network redundancy. If one network is "down" the unit will switch to an alternate network.

## Remote Command Guide

- All commands must start with a \$
- A valid pin number of 4 numeric digits must follow the \$ (default 0000)
- A \*\* character separates the fields within the command string
- Relay numbers must be either 1 or 2

### Abbreviations/substitutions used for commands

**pppp** - PIN CODE (4 digits)  
(default 0000)

**n** - relay number 1 or 2

**opr** - on, off, pls, tog

where

**on** - turn relay on

**off** - turn relay off

**pls** - turn relay on for 3 seconds  
then off again

**tog** - changes relay state

- if the relay is off when the command is executed the relay will turn on.

- if the relay is on when the command is executed the relay turns off.

### Command to operate relay

***\$pppp\*rlyn\*opr***

#### Examples

to pulse relay 1 - *\$pppp\*rly1\*pls*

to turn relay 2 on - *\$pppp\*rly2\*on*

to turn relay 1 off - *\$pppp\*rly1\*off*

